

Authentic Solution

www.authenticsolution.com

Intellicall Voice Logger System Installation Procedure



Authentic Solution

www.authenticsolution.com

Intellicall Voice Logger System Installation Procedure

1. Installation procedure Intellicall Voice Logger:

Suppose you have installed Win XP operating system on your PC.

1.1 Installation procedure for 2 Port USB Device – ASIN2USB

Connect 2 port Intellicall Voice Logger USB device to your computer USB port using usb cable provided in product package. You can see Red LED light indicator on device.


- New hardware found window will pop up. Insert CD in cd drive and locate Driver folder path to install driver. Follow below instruction.





Authentic Solution

www.authenticsolution.com

Intellicall Voice Logger System Installation Procedure

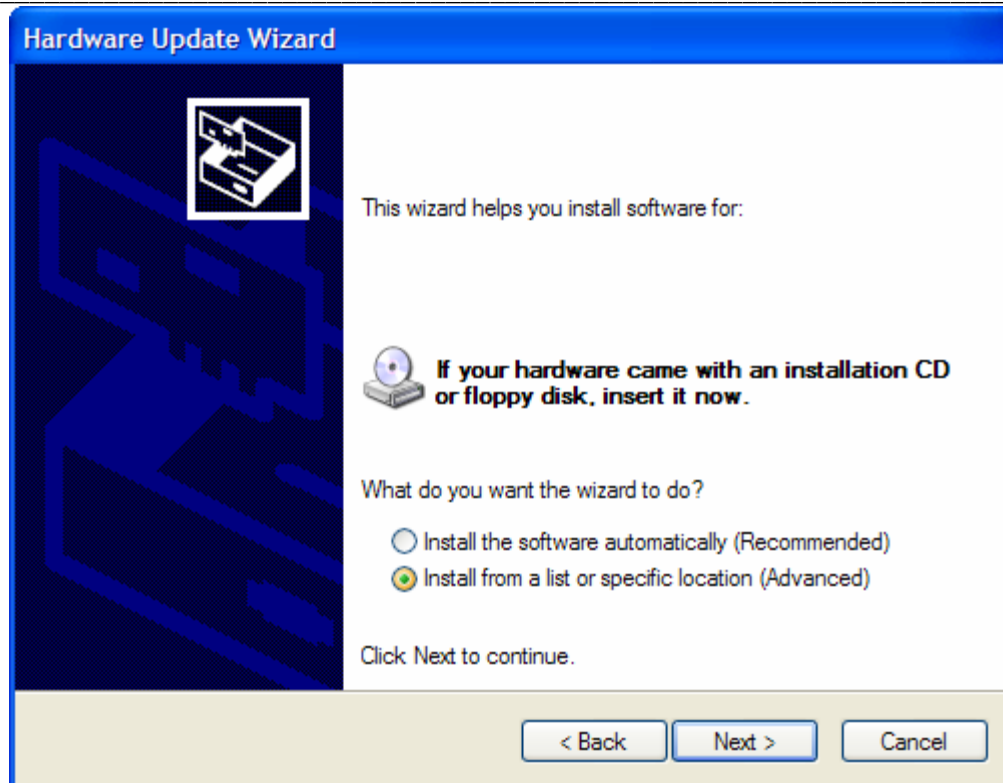

 
Click “Browse” and find Driver folder in CD Drive. Click on Driver folder and click “OK” then click “Next”

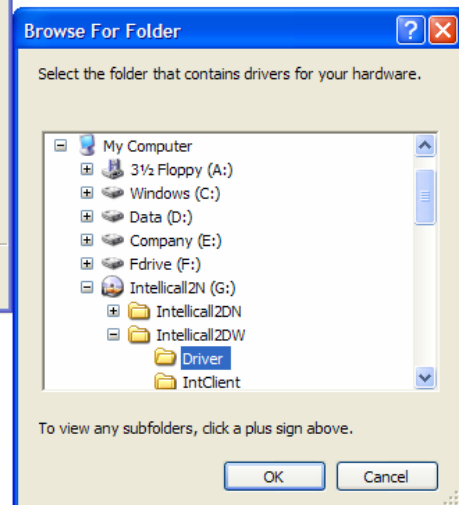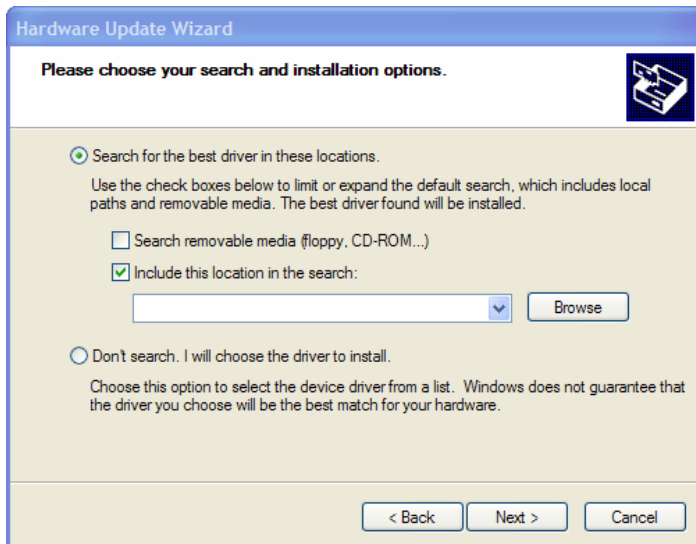

Authentic Solution

www.authenticsolution.com

Intellicall Voice Logger System Installation Procedure

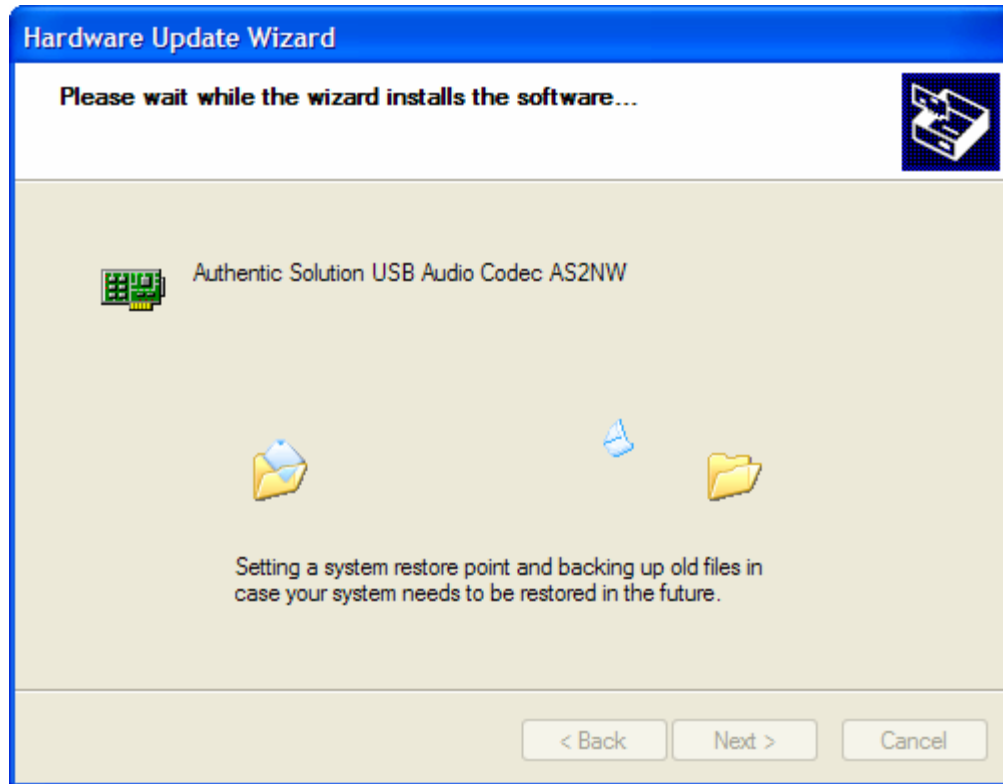


Authentic Solution

www.authenticsolution.com

Intellicall Voice Logger System Installation Procedure

Click “Finish” completing driver installation for Intellicall Voice Logger.

 Right click on “My Computer”, “Properties”, “Hardware”, “Device Manager”, you can find “Authentic Solution USB Audio Codec AS2NW” component, it means driver installation is done successfully.

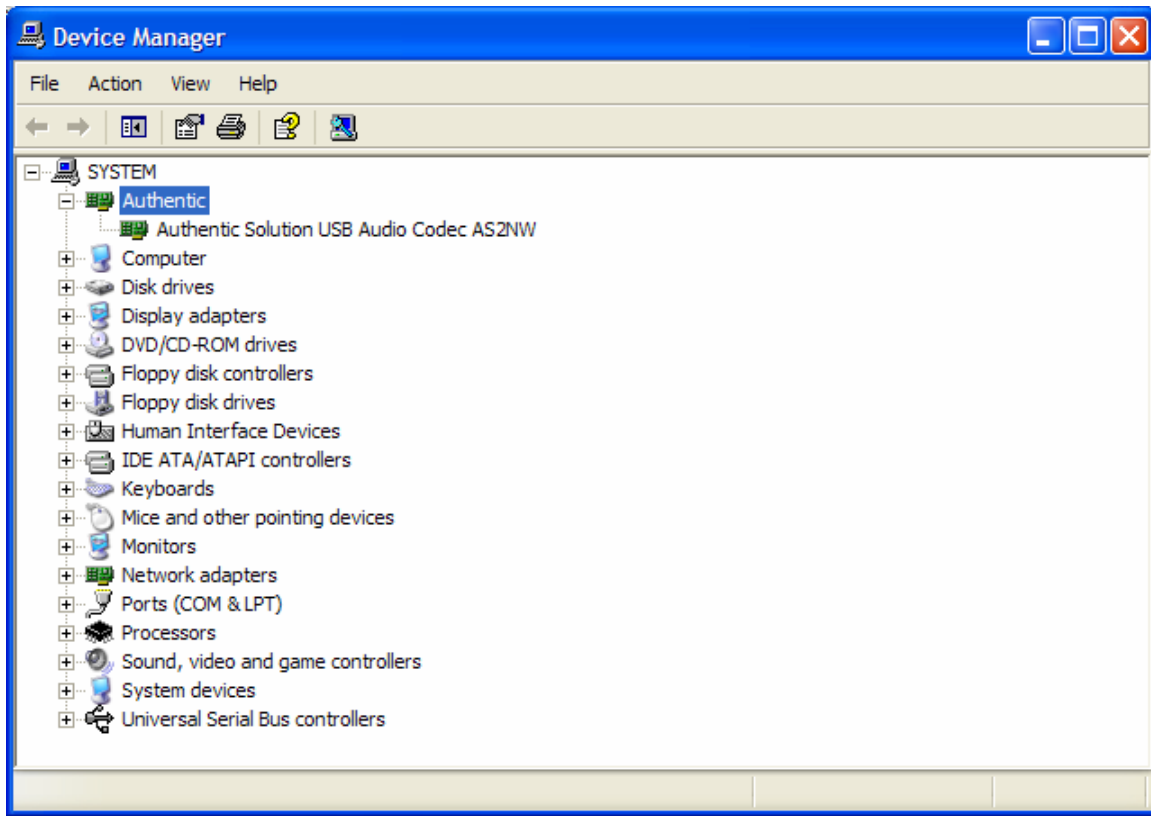


- After successful driver installation, Connect your telephone lines to device Line1 & Line2 port and connect your telephone instrument to Phone1 & Phone 2 port using provided telephone cables.
- Copy Intellicall2W folder in C:\ drive from CD and restart PC. Run Intellicall.exe file from Intserver folder, after restart PC.
- You can see Intellicall3.0 Software interface with 32 phone blocks on your screen in which 1 and 2 number phone blocks will be highlighted with white background. Red indicator light is blinking on device opening the Intellicall Voice Logger software.

Authentic Solution

www.authenticsolution.com

 Intellicall Voice Logger System Installation Procedure

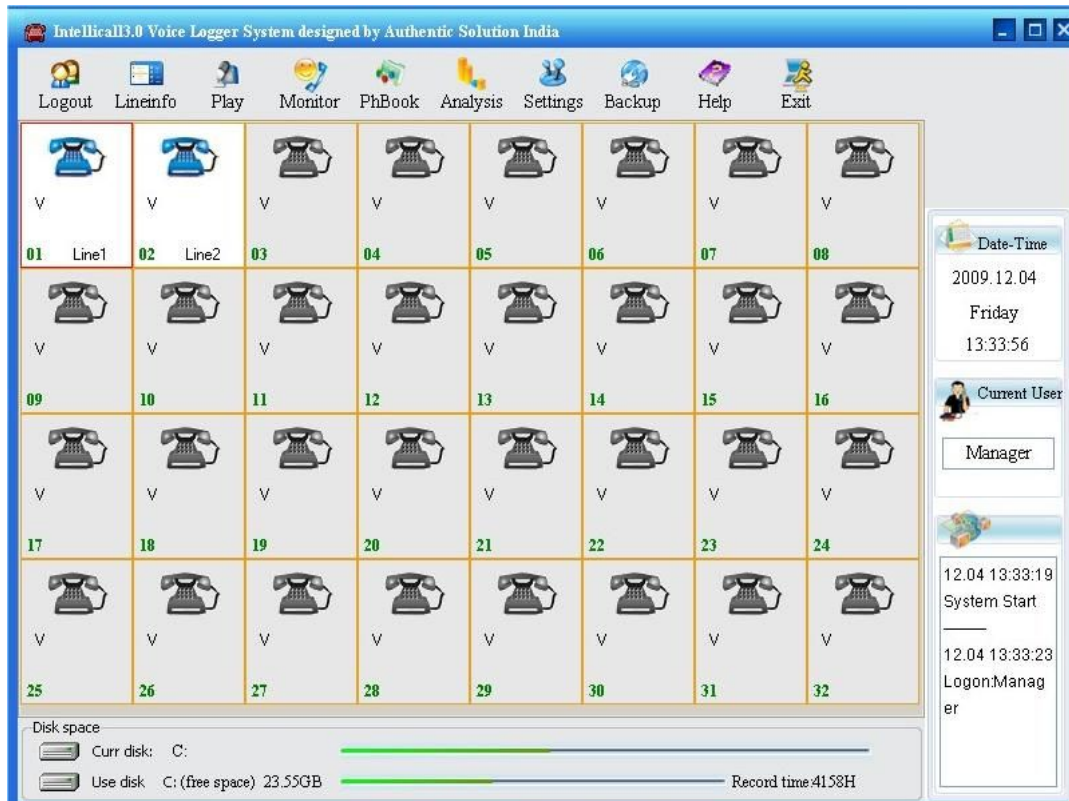

1.2 Installation procedure for 4 Port USB Device – ASIN4USB

- Connect 4 port USB device to your computer USB port. You can see Red LED light indicator on device.
- New hardware found window will pop up. Insert CD in cd drive and locate Driver folder path to install driver. (Follow same procedure as 2 ports ASIN2USB, para 1.1)
- After successful driver installation copy Intellicall4W folders in C:\ drive from CD and restart PC. Run Intellicall.exe file from Intserver folder, after restart PC.
- You can see Intellicall3.0 Software interface with 32 phone blocks on your screen in which 1 to 4 number phone blocks will be highlighted with white background. Red indicator light is blinking on device opening the Intellicall Voice Logger software.
- Connect your telephone lines parallel to device 1, 2, 3 & 4 no. RJ11 ports.

Authentic Solution

www.authenticsolution.com

Intellicall Voice Logger System Installation Procedure

1.3 Installation procedure for 8 Port & 16 Port PCI Card – ASIN8PCI & ASIN16PCI

- Turn off your PC. Insert PCI card in available PCI slot on motherboard and fix it well with screw. Turn on your PC.
- New hardware found window will pop up. Insert CD in cd drive and locate Driver folder path to install driver. (Follow same procedure as 2 ports ASIN2USB, para 1.1)
- After successful driver installation copy Intellicall16W folders in C:\ drive from CD and restart PC. Run Intellicall.exe file from Intserver folder, after restart PC.
- You can see Intellicall3.0 Software interface with 32 phone blocks on your screen in which 1 to 16 number phone blocks will be highlighted with white background.
- Connect 4 nos. RJ45 jack cables provided in package to PCI card's port. These 4 cables converted in 16 nos. RJ11 jacks at end of the cable. Connect your telephone lines parallel to these 16 nos. RJ11 jacks.

2. Disk (CD) Contents

Intellicall3.0 Voice Logger Disc contents 5 nos. of software.

Driver – Driver for hardware unit. Locate the folder “Driver” to find driver in installation.

IntServer – Server application. Open Intellicall.exe file to run server application. It will open Intellicall3.0 Voice Logger telephone recording software interface.


IntClient – Client software for LAN and remote access through internet.

Run IntClient.exe file; enter IP of server PC and Logon to server. You can play recording and monitor live calls remotely.

Authentic Solution

www.authenticsolution.com

Intellicall Voice Logger System Installation Procedure

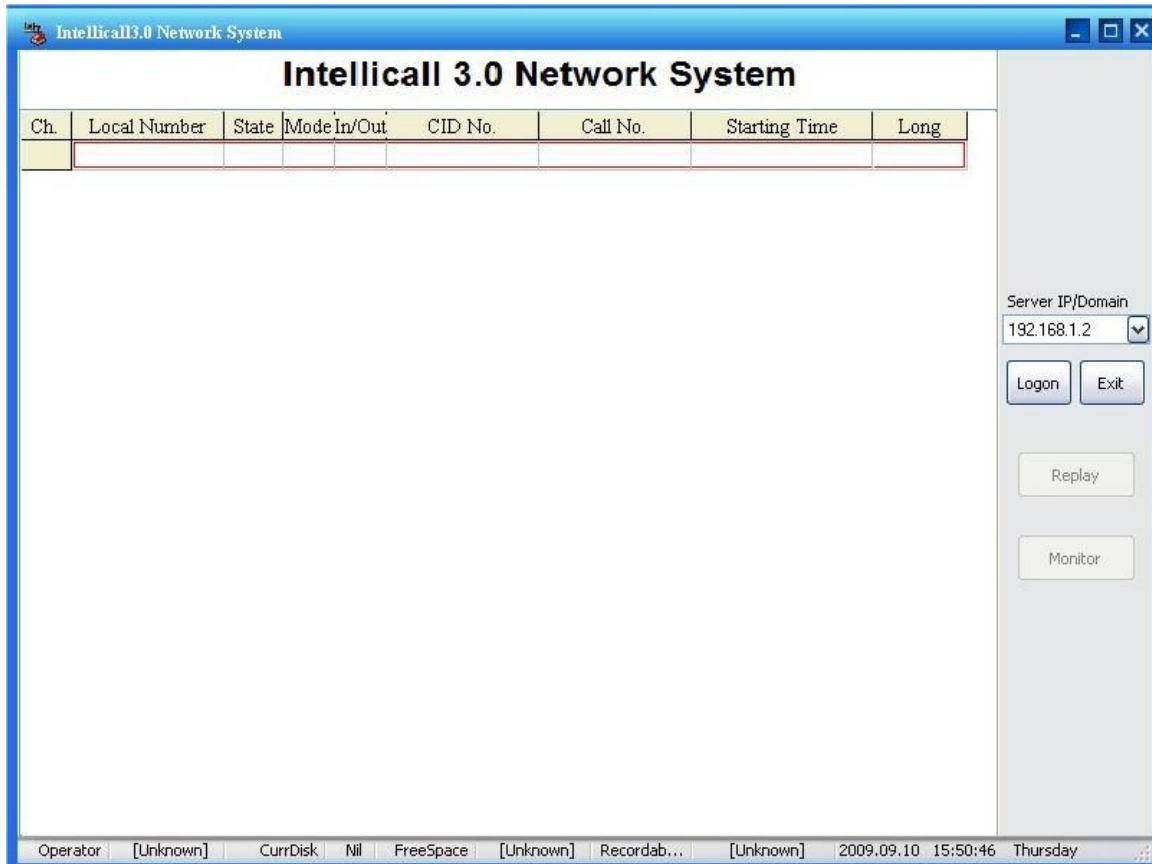

IntPlayer – Player software lets you to play recording from copied data on other computer. You can copy “Data” folder from Server PC to other PC’s root drive and run IntPlayer.exe file to open telephone recording list.

IntPopup – Popup software is used to pop up incoming phone number (caller ID)

3. Minimum requirement of computer system & operating system:

Computer System: Pentium-4, 1 GB RAM, 80 GB Hard disk with USB 2.0 Port for USB recorder & available PCI Slot on motherboard for PCI recording card. Use higher configuration PC for 16 ports or more port recording.

Operating System Support: Win XP, Win 2K, Vista, and Windows 7

Authentic Solution

W1, Madhavbagh, Nirnaynagar, Ahmedabad-382481, India

Ph: +91 79 27620176 Mobile: +91 9979933311, +91 9376110381

Email: info@authenticsolution.com

Website: <http://www.authenticsolution.com>